

Unlocking/locking locks ASD C10/11, ASD N11 PIN With code (password)



The handle (lock) is inactive and rotates freely when locked.

1. Press the button to activate the keyboard (numbers light up)
2. Carefully dial the code you received (4 to 9 digits) and finish with the sign (button) "#"
3. If you entered the code correctly, the lock will announce "Unlocked" by voice.
4. The handle (lock) becomes active in a few seconds and can drive the latches when turning.
5. If you entered the wrong code, the lock will tell you by voice "Operation fale"
6. When unlocking, turn to the right - clockwise and open the door if the lock is on the left and in the opposite direction if your lock is on the right.
7. When locking, enter the code again (point 2) and turn in the opposite direction to unlocking (point 6) and lock the door.